

1. Introduction

BL2000-HZB-V1 COP & Parallel Landing Call Convert Board has the following main functions:

- (1). This board can be used for both COP and parallel Landing call input & response; Two mode is switched by DIP-Switch.
- (2). 7-segment floor display output and elevator status output;

2. BL2000-HZB-V1 Picture and Dimension



Figure 2.1 BL2000-HZB-V1 Front View

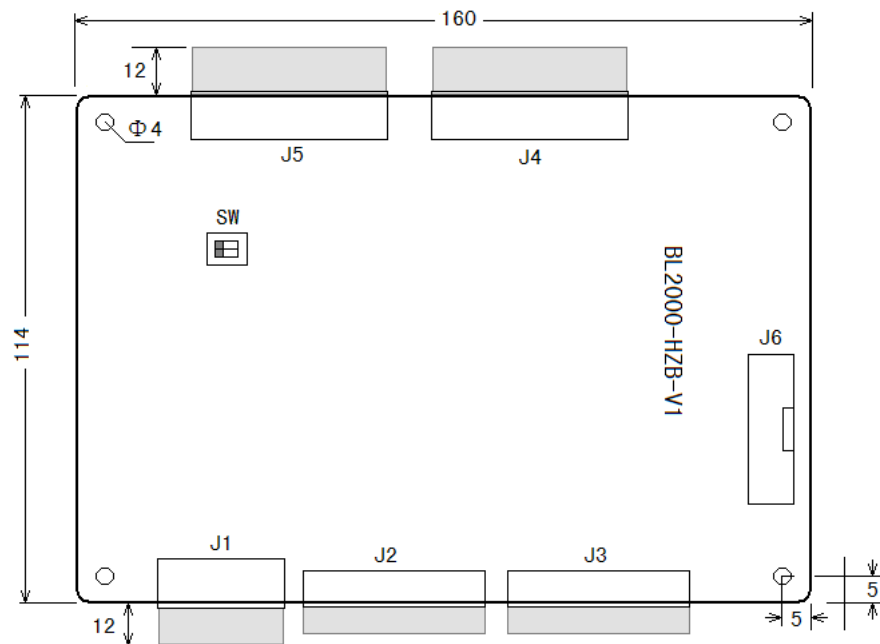


Figure 2.2 BL2000-HZB-V1 Dimension

3. Terminal Definition

Table 3.1 Terminal Definition and Specification

Terminal	Pin	Definition for COP Board	Definition for Convert Board	Specification	
				Type	Capacity
J1	J1-1	24V Input	24V Input	Power & Communication	
	J1-2	24V Ground	24V Ground		
	J1-3	CAN Bus H	CAN Bus H		
	J1-4	CAN Bus L	CAN Bus L		
	J1-5	24V Output	24V Output		
J2	J2-1	Inspection	1 st Up call of Single collective or 1 st Up call of Full collective	Opto-coupler Input	8mA
	J2-2	Inspection up	2 nd Down call of Single collective or 2 nd Down call of Full collective		
	J2-3	Inspection down	3 rd Down call of Single collective or 2 nd Up call of Full collective		
	J2-4	Attendant Input	4 th Down call of Single collective or 3 rd Down call of Full collective		
	J2-5	Attendant Up	5 th Down call of Single collective or 3 rd Up call of Full collective		
	J2-6	Attendant Down	6 th Down call of Single collective or 4 th Down call of Full collective		
	J2-7	Non-stop input	7 th Down call of Single collective or 4 th Up call of Full collective		
				OC Door Output	Current -limit resistor 560Ω

BL2000-HZB-V1.0 CCP & Parallel Landing Call Convert Board (603_20)

Note:

1 While used as LOP convert board, if maximum floor less than 32 floors, landing call inputs of rear door will follow the last landing call input of front door. For example,

	Single collective	Full collective
J2-1	1 (front door)	1 (front door)
J2-2	2 (front door)	2 (front door)
J2-3	3 (front door)	2 (front door)
J2-4	1 rear door	3 (front door)
J2-5	2 rear door	1 rear door
J2-6	3 rear door	2 rear door
J2-7		2 rear door
J2-8		3 rear door

If maximum floor is more than 32 floors, all landing call inputs become front door call.

2. While used as Car Top board,

Maximum support 32 car calls.

While attendant mode, if there is landing call input, related car call button will flicker.

3. Display

Overload display O L Floor Indication Loop

Inspection r

Display When floor indication is set as G or GE , segment display will show G