 




---

---

---

## **Chapter 1 Elevator Group Control System Introduction**

### **1.1 On Duty Mode**

### **1.2 Off Duty Mode**

### **1.3 Balance Mode**

### **1.4 Standby Mode**


**Note that if the elevator is faulty, or in Attendant mode, Inspection mode, Parking mode, Fireman mode, Independent mode, then it will be removed from the Group control bank.**

**The operation and setting of each elevator in the group control bank shall be referred to SJT-WVF5 elevator control system testing and commissioning manual.**

---



## 2.2 LCD Display Flowchart and Description

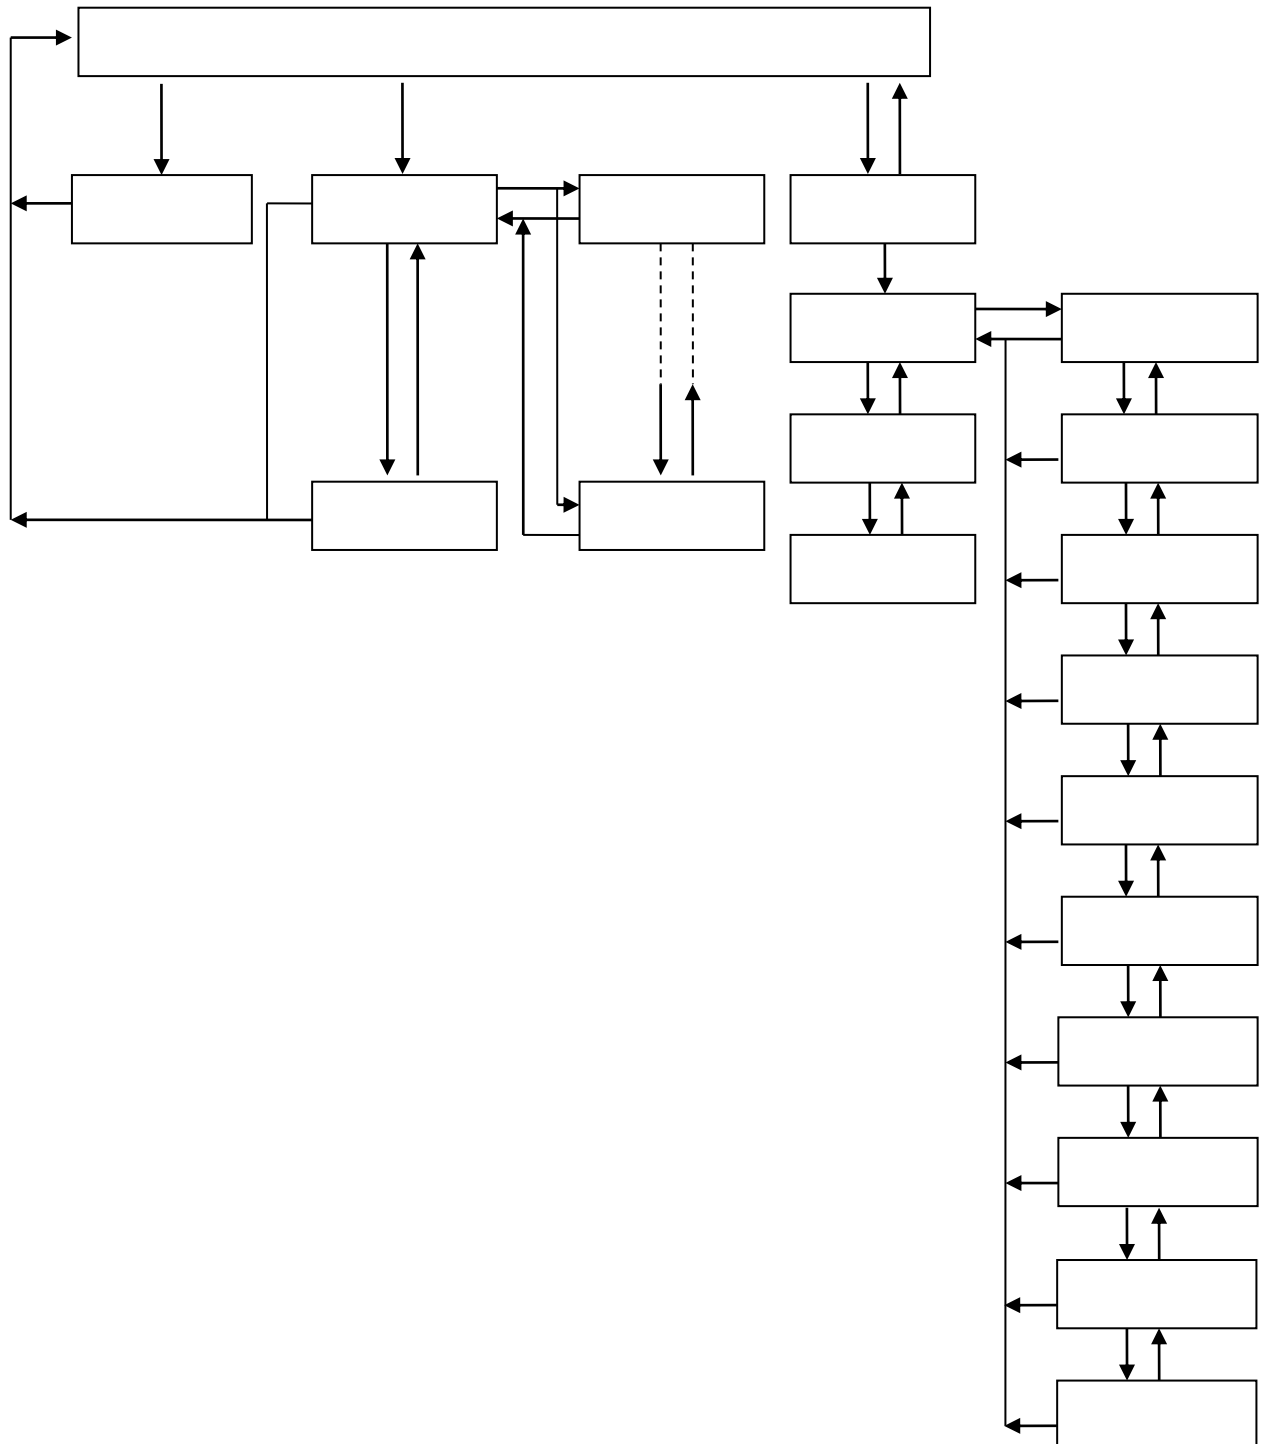

---

## **2.3 LCD Display Main Menu Description**

## **2.4 Group Control Status and Communication**

---



---

## 2.7 Password Setting

## 2.8 Save Parameter



---

## **2.9 Change Password**

## **2.10 General Parameter Settings**

### **2.10.1 Group able set**

---

### 2.10.3 Mode Select

---

**2.10.5 Set On Duty Time / Off Duty Time**








---

## **2.11** Setting requirement for Group Control versus elevator numbers (A, B, C, ...)

---



**Group Control Manual: Additional Description (2007-4-7)**

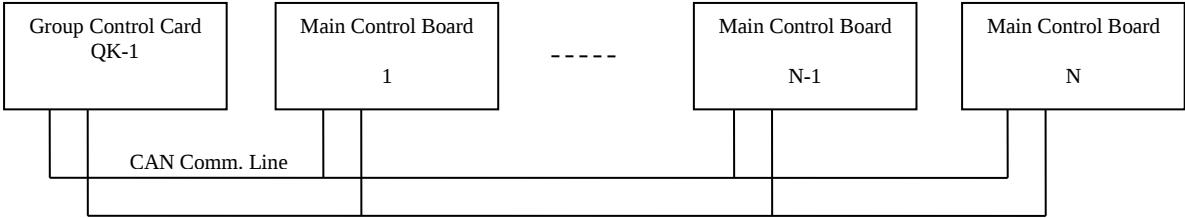

**Remove**

**Remain**